

C-VIGIL Ltd : marine (CVM)

Marine Safety & Security Systems


GUARDIAN SYSTEMS

guardianTHERMOGUARD
Remote Temperature Monitoring



GUARDIAN THERMOGUARD

Operations Guide

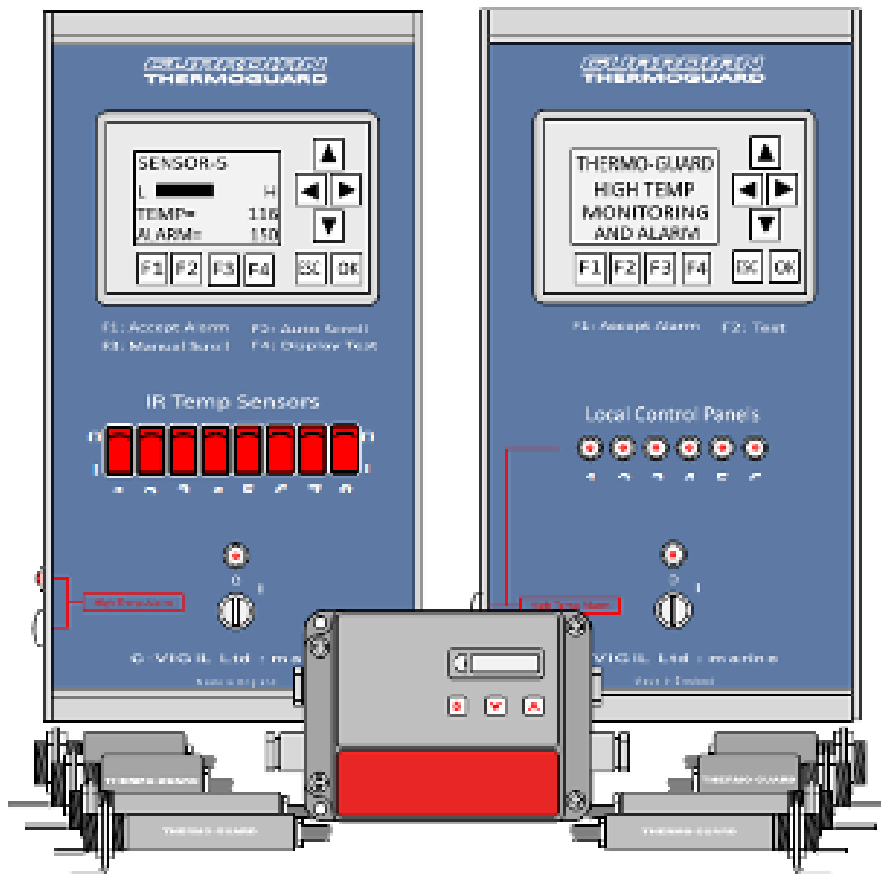

C-VIGIL Ltd : marine (CVM)
'The Barn', Bryntirion Road
Bagillt, Flintshire
CH6 6DS, UK
+44 (0)1244 279 879
support@cvigil.co.uk :- www.cvigil.co.uk



Contents


TYPICAL OVERVIEW - SHIP	5
TYPICAL OVERVIEW - OFFSHORE	6
1. GENERAL DESCRIPTION.....	7
1.1 Introduction	7
2. SYSTEM COMPONENTS	8
2.1 Local Control Panel (LCP)	8
2.2 Alarm Panel (AP)	8
2.3 IR Temperature Sensor – CT Type	8
2.4 IR Temperature Sensor – CT Type Controller	9
2.5 IR Temperature Sensor – CS Type	9
2.6 ATEX Conversion Kit	9
2.7 Sensor Mount	9
3. OPERATION	10
3.1 Local Control Panels (LCP).....	10
3.2 Alarm Panel (AP)	10
3.3 Power – On / Off : LCP & AP.....	11
3.4 LCP Sensor Selection / Isolation.....	11
3.5 Sensor High Temperature Indication – LCP.....	12
3.6 LCP – Text Display.....	12
3.6.1 Display Layout.....	12
3.6.2 High Temperature Alarm Indication.....	13
3.6.3 Accept & Silence Audible Alarm	13
3.6.4 Display – Auto Scroll.....	14
3.6.5 Display – Manual Scroll	14
3.6.6 Display - Test.....	14
3.7 Alarm Panel (AP) - Text Display	15
3.7.1 Display Layout.....	15



3.7.2	LCP Alarm Indication	15
3.7.3	Accept LCP Alarm & Silence Audible Alarm	16
3.7.4	Display Test	16
3.7.5	Unused Keys	16
F2 & F3 ARE NOT USED.		16




Typical Overview - Ship

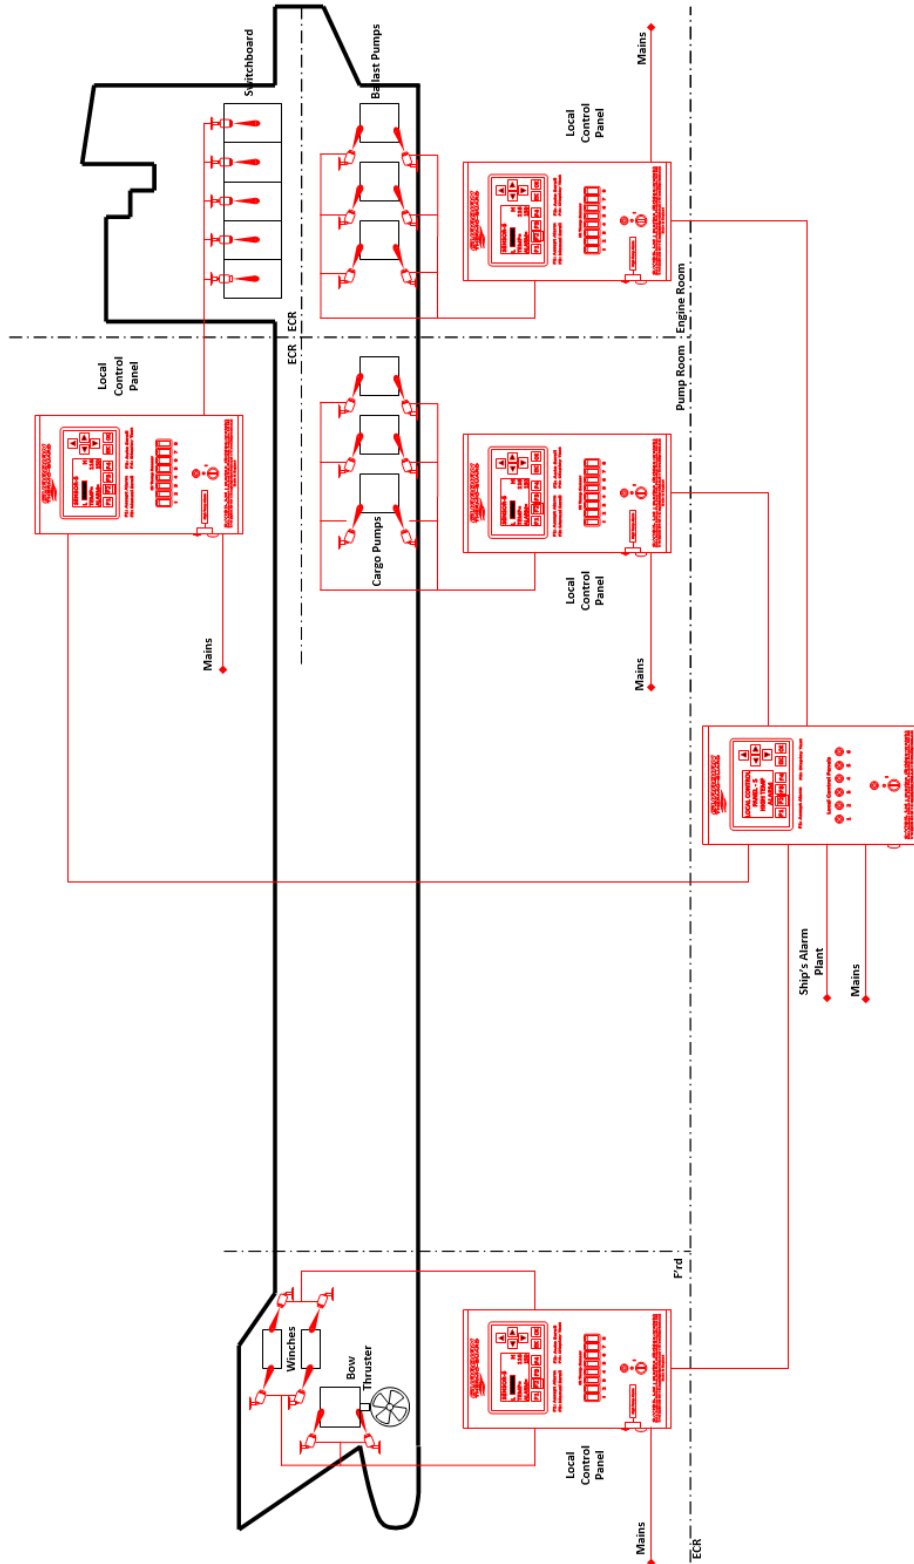



Typical Overview - Offshore

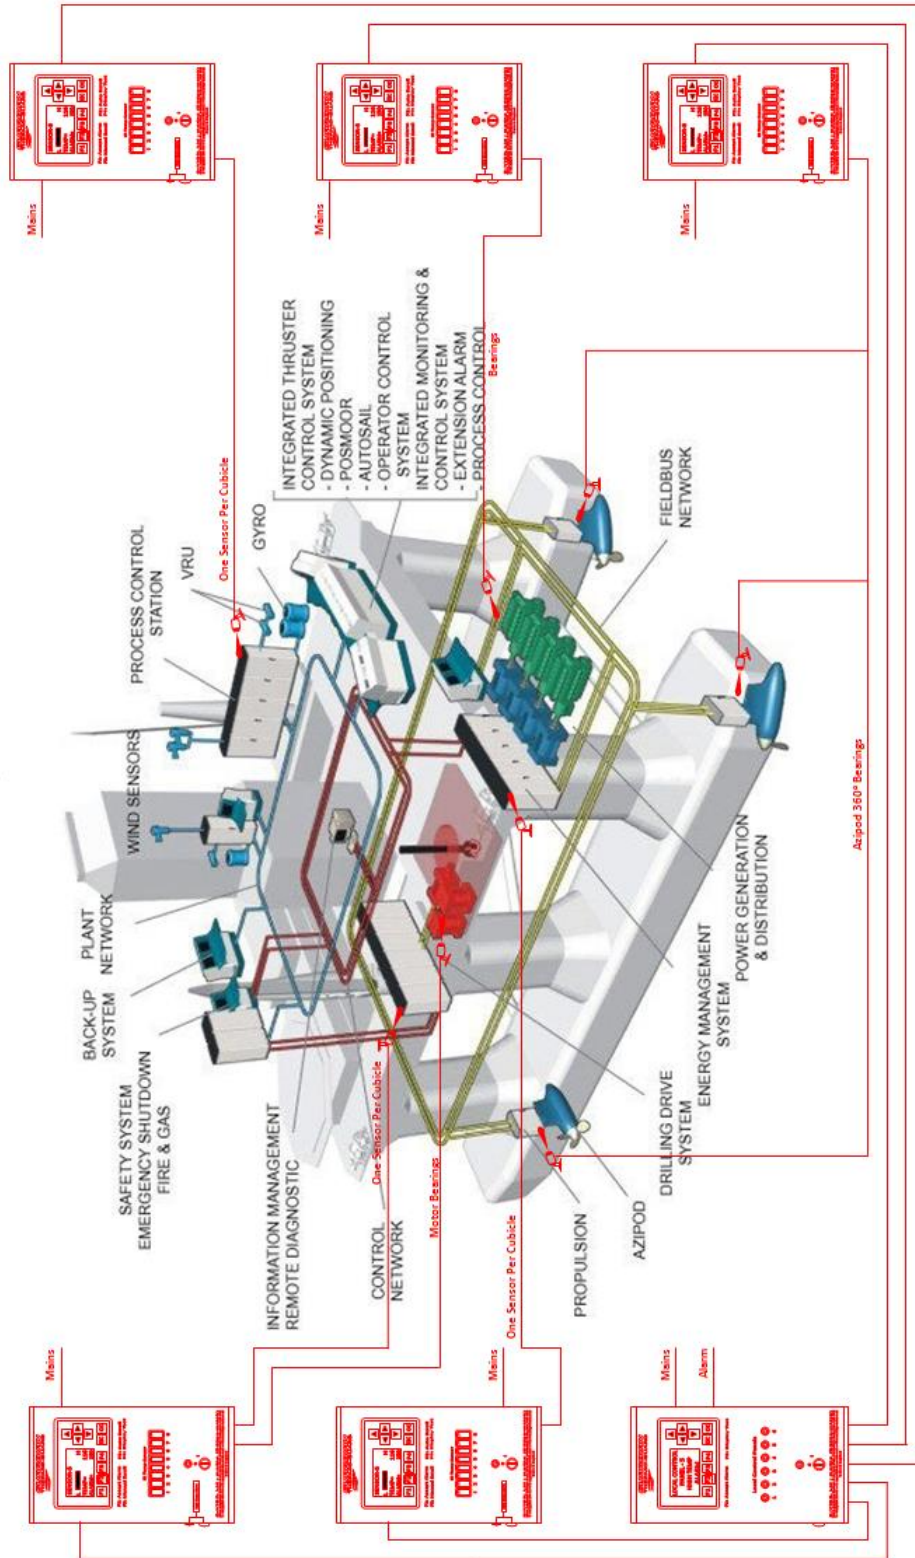



1. General Description

1.1 Introduction

Thermo-Guard . . .

Critical Machinery Monitoring : Non-Contact Infra-red (IR) Spot Radiometry Temperature Monitoring.

Protection for switchboards, switchgear, transformers, motors, pumps, cargo gear, HV, bearings...etc.

Compact form non-contact IR sensors can be positioned to permanently monitor rotating contact areas, i.e. motor end covers with bearing keeps, shaft support pillar bearings, pump white metal bearings...etc.

It is often the case that the failure of 'small cost' items, such as bearings, can cause extremely expensive damaged to their associated machinery. As bearings start to deteriorate they tend to generate heat – this can be measured.

By monitoring bearing temperatures, this increase in normal running temperature can be flagged up before total failure and therefore hopefully save the parent machine.

Switchboard failures are often preceded by bus-bar and switchgear temperature rise – again this can be measured.


Bus-bar fish plate joints can, due to vibration, work loose thereby causing heat rise through increased contact resistance. Support insulator breakdown can cause surface tracking - again causing dangerous heat rise.

ATEX (EEX) adapter kit (double zener barriers) available for hazardous area monitoring.




2. System Components

2.1 Local Control Panel (LCP)

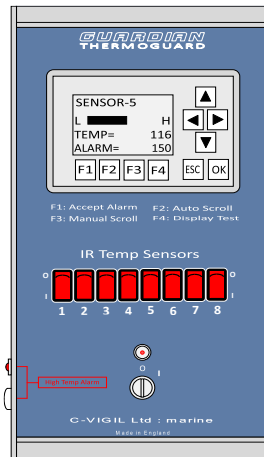

LCP – can include up to 8 IR temperature sensors. The text display indicates the monitored machinery’s temperature and alarm set point. Should the temperature rise above the set point an alarm is initiated and the text display indicates which sensor is in alarm. Can also be connected to the alarm and monitoring system. For multi-panel system the LCP is connected to the Alarm Panel (AP) – see below.

2.2 Alarm Panel (AP)

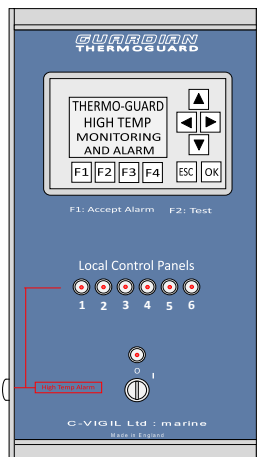

AP – up to 6 LCPs can be connected. As the LCP registers the high temperature alarm, this alarm indication is also indicated on the Alarm Panel. The text display indicates which LP is alarm. Can also be connected to the alarm and monitoring panel.


2.3 IR Temperature Sensor – CT Type



General Use non-contact IR temp sensor.
-50°C to 975°C
Can be used with ATEX kit for hazardous areas applications.



2.4 IR Temperature Sensor – CT Type Controller

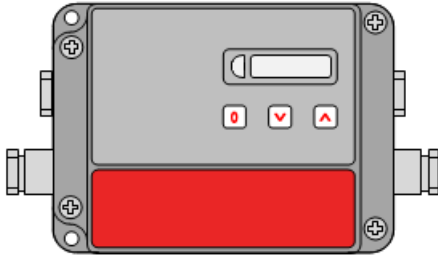


Controller interface unit for CT type sensors
0-10V or 4-20mA outputs

2.5 IR Temperature Sensor – CS Type



General use non-contact IR temperature sensor
-40°C to 400°C
Integrated electronics
0-10V or 4-20mA outputs

2.6 ATEX Conversion Kit

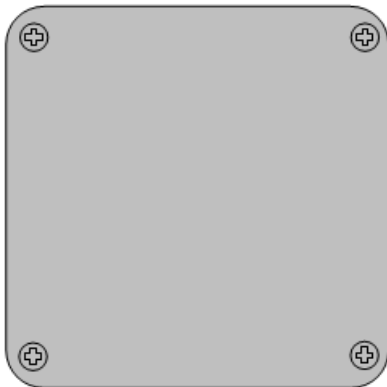

Double zener barrier, housed in rugged enclosure
converts the CT type sensor for hazardous area use.

2.7 Sensor Mount



Sensor mounts




3. Operation

3.1 Local Control Panels (LCP)

For single panel systems – to be sited in the vicinity of the control and monitoring centre. Up to 8 IR temperature sensors can be connected to each LCP. For larger installations then further LCPs can be added to increase the number of measured points. Text display indicates sensor(s) actual temperature reading and the alarm set point. Alarm indication should the temperature rise above the set point. Each sensor can be isolated with the front panel illuminated rocker switches. Auto or manual scroll of sensor indication + test facility. On / off key switch for added security.

Rugged enclosure and Class approved electronics for trouble free operation

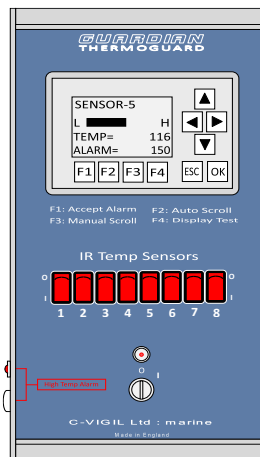


3.2 Alarm Panel (AP)

For the larger multi LCP systems then the LCPs are all connected to the AP. The AP then connects to the alarm and monitoring system. The text display indicates which LCP is in the alarm condition along with an LED for easy identification. Test facility for the text display, alarm sounder and LED indicators.



On / off key switch for added security.

Rugged enclosure and vandal proof indicators for trouble free operation

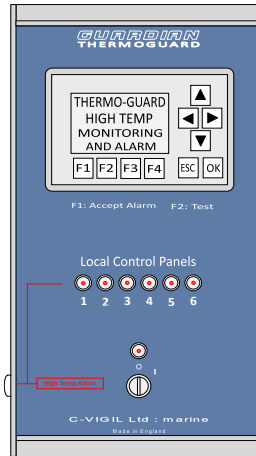


3.3 Power – On / Off : LCP & AP

Turn key switch to the 'I' position. The supply on LED should now be lit. After a brief period (2 secs) the alarm sounder and all LEDs should operate for 50ms indicating the logic module has started correctly.

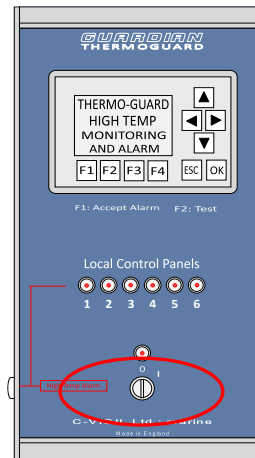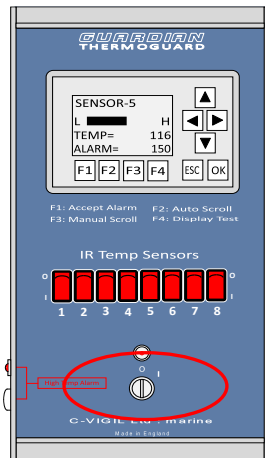


3.4 LCP Sensor Selection / Isolation

Any of the 8 sensors can be selected using the front panel illuminated rocker switches – depending on what sensors have been installed. Sensors can also be isolated using the same switches. As a sensor is selected its associated switch will illuminate red.

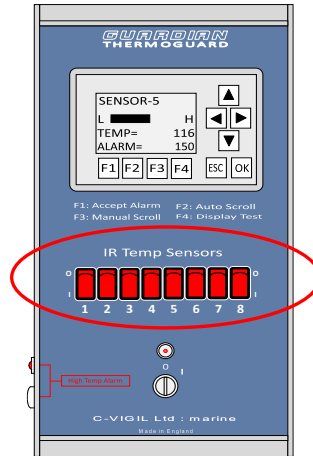

3.5 Sensor High Temperature Indication – LCP


Should any of the attached sensors register a temperature above the set point- a alarm is initiated. This consists of an audible alarm sounder and visual alarm LED.

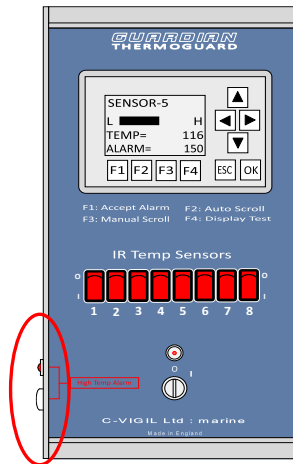

3.6 LCP – Text Display


3.6.1 Display Layout

The text display is a 4 line 48 character display with 10 membrane software function keys. F1 to F4 are control keys. The sensor's measured value is displayed as a bar graph and as an actual value. The alarm set point is also displayed

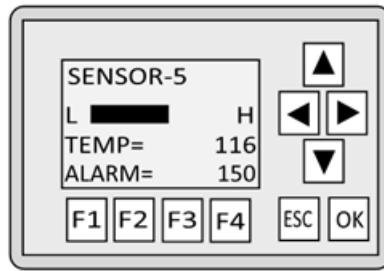


3.6.2 High Temperature Alarm Indication

Should any of the attached sensor's measured value rise about the programmed set point an alarm screen is displayed and the audible / visual alarms are initiated.

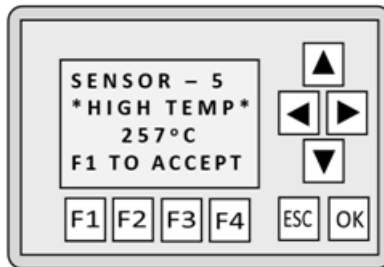

3.6.3 Accept & Silence Audible Alarm


Press membrane software key – F1

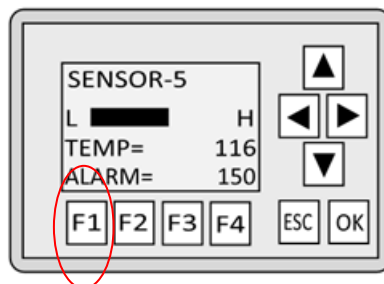




3.6.4 Display – Auto Scroll

Display 'Auto Scroll' – F2. The display will show each attached temperature sensor's screen in order for approx., 5 secs per screen. Press again and the screen will remain blank, although alarm monitoring is still active.

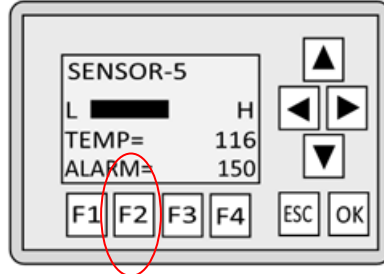


3.6.5 Display – Manual Scroll

Display 'Manual Scroll' – F3. The display will show each attached temperature sensor's screen in order as F3 is pressed. Alarm monitoring is still active whatever screen is selected.

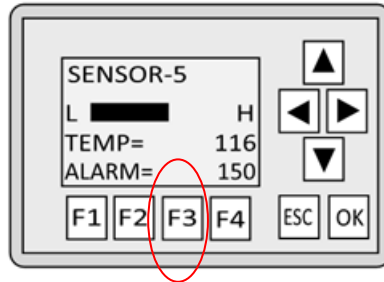

3.6.6 Display - Test


Function test – F4. Pressing F4 for longer than 3 secs (>3s) starts the function test, the display will show the test screen for 5 secs– check that all segments operate correctly. The audible and visual alarms are both activated for 5 secs.

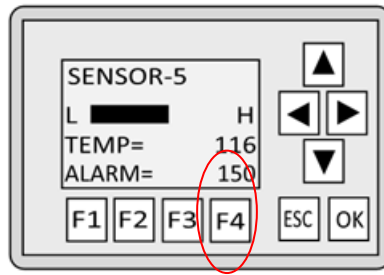

3.7 Alarm Panel (AP) - Text Display


3.7.1 Display Layout

The text display is a 4 line 48 character display with 10 membrane software function keys. F1 to F4 are control keys. The attached LCP(s) status are displayed as they enter the alarm state.

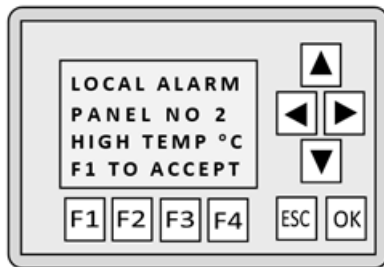

3.7.2 LCP Alarm Indication


Should any of the attached LCPs enter into alarm, the relevant panel is indicated on the text display and also by the front panel LEDs, the audible alarm is also activated.

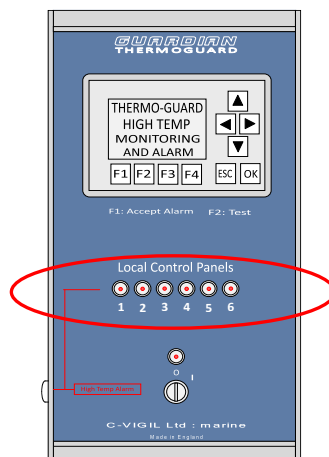




3.7.3 Accept LCP Alarm & Silence Audible Alarm

Press membrane software key – F1

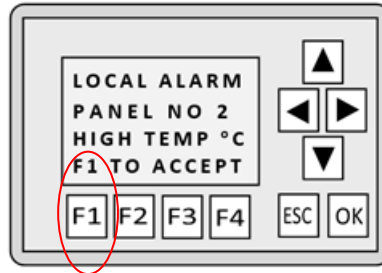

3.7.4 Display Test

Function test – F4. Pressing F4 for longer than 3 secs (>3s) starts the function test, the display will show the test screen for 5 secs– check that all segments operate correctly. The audible and visual alarms are all activated for 5 secs.

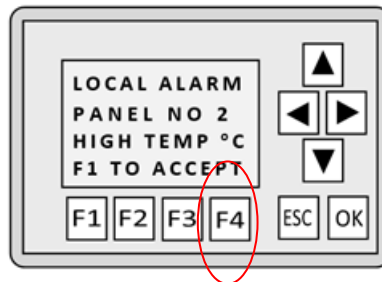

3.7.5 Unused Keys

F2 & F3 are not used.

